



EV & Forklift Parts

CURTIS DC MOTOR CONTROLLER PARAMETER LIST

Model: 1227-3402 (Assemblage Setting)

No.	Parameter	Min	Max	Value	Unit	Programmer Access Level	
						Read	Write
1	THRTL AUTO CAL	Off	On	Off		OEM	OEM
2	M1 ACCEL RATE	0	3	2	Seconds	User	User
3	M2 ACCEL RATE	0	3	2	Seconds	User	User
4	M1 DECEL	0	3	1.5		OEM	OEM
5	M2 DECEL	0	3	1.5		OEM	OEM
6	M1 REV DECEL	0	3	1		OEM	OEM
7	M2 REV DECEL	0	3	1		OEM	OEM
8	M1 MAX SPEED	40	100	60	%	OEM	OEM
9	M2 MAX SPEED	60	100	100	%	OEM	OEM
10	M1 MIN SPEED	0	60	30	%	User	User
11	M2 MIN SPEED	0	100	50	%	User	User
12	M1 MAIN C/L	30	160	160	Ampere	OEM	OEM
13	M2 MAIN C/L	30	160	160	Ampere	OEM	OEM
14	M1 IR COEFF	0	200	0		OEM	OEM
15	M2 IR COEFF	0	200	0		OEM	OEM
16	REVERSE SPEED	25	60	40	%	User	User
17	RAMP SHAPE	20	70	50		OEM	OEM
18	CREEP SPEED	0	100	4	%	OEM	OEM
19	BRAKE DLY	0	5	1	Seconds	OEM	OEM
20	THROTTLE TYPE	0	3	3	#	OEM	OEM
21	DIRECTION	0	2	2		OEM	OEM
22	THRTL GAIN	10	100	75		OEM	OEM
23	THRTL DEADBAND	5	30	15	%	OEM	OEM
24	HIGH PEDAL DIS	Off	On	On	#	OEM	OEM
25	PROGRAM, #1	0	7	6		OEM	OEM
26	PROGRAM #4	0	100	70		OEM	OEM
27	CALIBRATION 5	0	25	5		OEM	OEM
28	CALIBRATION 4	0	32	16		OEM	OEM

NOCO SHOP

Website: <https://www.noco-evco.com/> - Email: info@noco-evco.com