



EV & Forklift Parts

CURTIS DC SEPEX MOTOR CONTROLLER PARAMETER LIST

Model: 1268-5403

No.	Parameter	Min	Max	Default Value	Programmer Access Level	
					Read	Write
1	M1 MAIN C/L	100	400	400	OEM	OEM
2	M2 MAIN C/L	100	400	400	OEM	OEM
3	REGEN C/L	50	400	300	OEM	OEM
4	PLUG C/L	50	400	200	OEM	OEM
5	AUX DRVR MODE	0	2	1	OEM	OEM
6	AUX PULL IN	1	3	1	OEM	OEM
7	AUX HOLDING	1	3	1	OEM	OEM
8	EMB DELAY	0	5	1.4	OEM	OEM
9	FLD BRAKE	Off	On	Off	OEM	OEM
10	FLD BRAKE SPD	0	6	3.2	OEM	OEM
11	FLD BRAKE MAX	0	50	10	OEM	OEM
12	FLD BRAKE RATE	0	6	2	OEM	OEM
13	EMB SPD CHECK	Off	On	Off	OEM	OEM
14	EMB SPD VALUE	0	40	0.4	OEM	OEM
15	RPM TO SPEED	20	255	83	OEM	OEM
16	TACHO POLES	4	20	8	OEM	OEM
17	MODE AFTER KEY	Off	On	Off	OEM	OEM
18	WARNING OPTION	0	7	3	OEM	OEM
19	M1 FWD SPEED	4	40	16.2	OEM	OEM
20	M1 ACCEL	0.6	5	2.8	OEM	OEM
21	M1 DECEL	0.2	10	2	OEM	OEM
22	M1 BRAKE MIN	10	100	10	OEM	OEM
23	M1 BRAKE MAX	10	100	100	OEM	OEM
24	M1 BRAKE MAP	20	80	22	OEM	OEM
25	M1 BRAKE START	0	40	5	OEM	OEM
26	M1 BRAKE END	0	40	9	OEM	OEM
27	REV SPEED	4	16	6.2	OEM	OEM
28	REV ACCEL	0.6	5	3.2	OEM	OEM
29	REV DECEL	0.2	10	2	OEM	OEM
30	REV BRAKE MIN	10	100	20	OEM	OEM
31	REV BRAKE MAX	10	100	80	OEM	OEM
32	REV BRAKE MAP	20	80	40	OEM	OEM
33	REV BRK START	0	40	1.4	OEM	OEM
34	REV BRAKE END	0	40	4	OEM	OEM
35	M2 FWD SPEED	5.6	40	16.2	OEM	OEM
36	M2 ACCEL	0.6	5	2	OEM	OEM
37	M2 DECEL	0.6	10	2	OEM	OEM
38	M2 BRAKE MIN	10	100	10	OEM	OEM
39	M2 BRAKE MAX	10	100	100	OEM	OEM

NOCO SHOP

Website: <https://www.noco-evco.com/> - Email: info@noco-evco.com



EV & Forklift Parts

CURTIS DC SEPEX MOTOR CONTROLLER PARAMETER LIST

Model: 1268-5403

No.	Parameter	Min	Max	Default Value	Programmer Access Level	
					Read	Write
40	M2 BRAKE MAP	20	80	22	OEM	OEM
41	M2 BRAKE START	0	40	5	OEM	OEM
42	M2 BRAKE END	0	40	14.2	OEM	OEM
43	OVERVOLTAGE	40	65	62	OEM	OEM
44	LOW VOLTAGE	27	42	40	OEM	OEM
45	THROTTLE MAP	20	80	30	OEM	OEM
46	THROTTLE 0%	0	2	0.5	OEM	OEM
47	THROTTLE 100%	2.1	5	4.5	OEM	OEM
48	THROT FAULT LO	0	2	0.2	OEM	OEM
49	THROT FAULT HI	3	5	4.8	OEM	OEM
50	M1 FWD FLD MIN	2	15	5	OEM	OEM
51	REV FIELD MIN	2	15	5	OEM	OEM
52	M2 FWD FLD MIN	2	15	5	OEM	OEM
53	FLD MAP START	0	200	100	OEM	OEM
54	FIELD RAMP	20	80	50	OEM	OEM
55	FIELD MAX	20	50	30	OEM	OEM
56	FIELD MAP END	200	400	250	OEM	OEM
57	NEG FLD MAP START	0	200	30	OEM	OEM
58	NEG FLD RAMP	20	80	35	OEM	OEM
59	NEG FIELD MAX	10	50	30	OEM	OEM
60	NEG FLD MAP END	200	400	200	OEM	OEM
61	WALKAWAY C/L	6	25	21.5	OEM	OEM
62	KSI SRO ENABLE	Off	On	Off	OEM	OEM
63	DRV OVR CUR DIS	Off	On	Off	OEM	OEM
64	FIELD DIR SWAP	Off	On	Off	OEM	OEM

NOCO SHOP

Website: <https://www.noco-evco.com/> - Email: info@noco-evco.com